



win|RTA Basic  
QuickStart Guide

Version 2.4

AcoustX  
[www.acoustx.us](http://www.acoustx.us)

---

# Installation

Unzip the distribution to a folder. Double-click on mysetup and follow the directions. Start the program and open the Config menu.

Select Interfaces, then click on Select. After you have chosen the audio interface, and entered any other information you wish to save, click Save Configuration, and your settings will be saved for your next session.

---

## NOTICE

© Copyright 2019 AcoustX. All rights reserved.

win|RTA Basic is available at <https://acoustx.us>

Version 2.4

## LICENSE GRANT

win|RTA Basic (the "Program")


1. The Program is available free of charge for any peaceful, lawful purpose.
2. You may not sell or redistribute the Program.
3. You may not reverse engineer the Program.

See AcoustX website and the Program for full license.

## NO WARRANTY

The Program is distributed on an as is basis, without warranty. AcoustX makes no representation or warranty, either expressed or implied, with respect to the Program, its accuracy, quality, or fitness for a specific purpose. AcoustX shall have no liability to the user, or to any other person or entity with respect to any liability, loss, or damage caused, or alleged to have been caused either directly or indirectly by the Program. This includes, but is not limited to, interruption of service, loss of data, time, or profits, or consequential damages resulting from the use of the Program.

# Main Screen

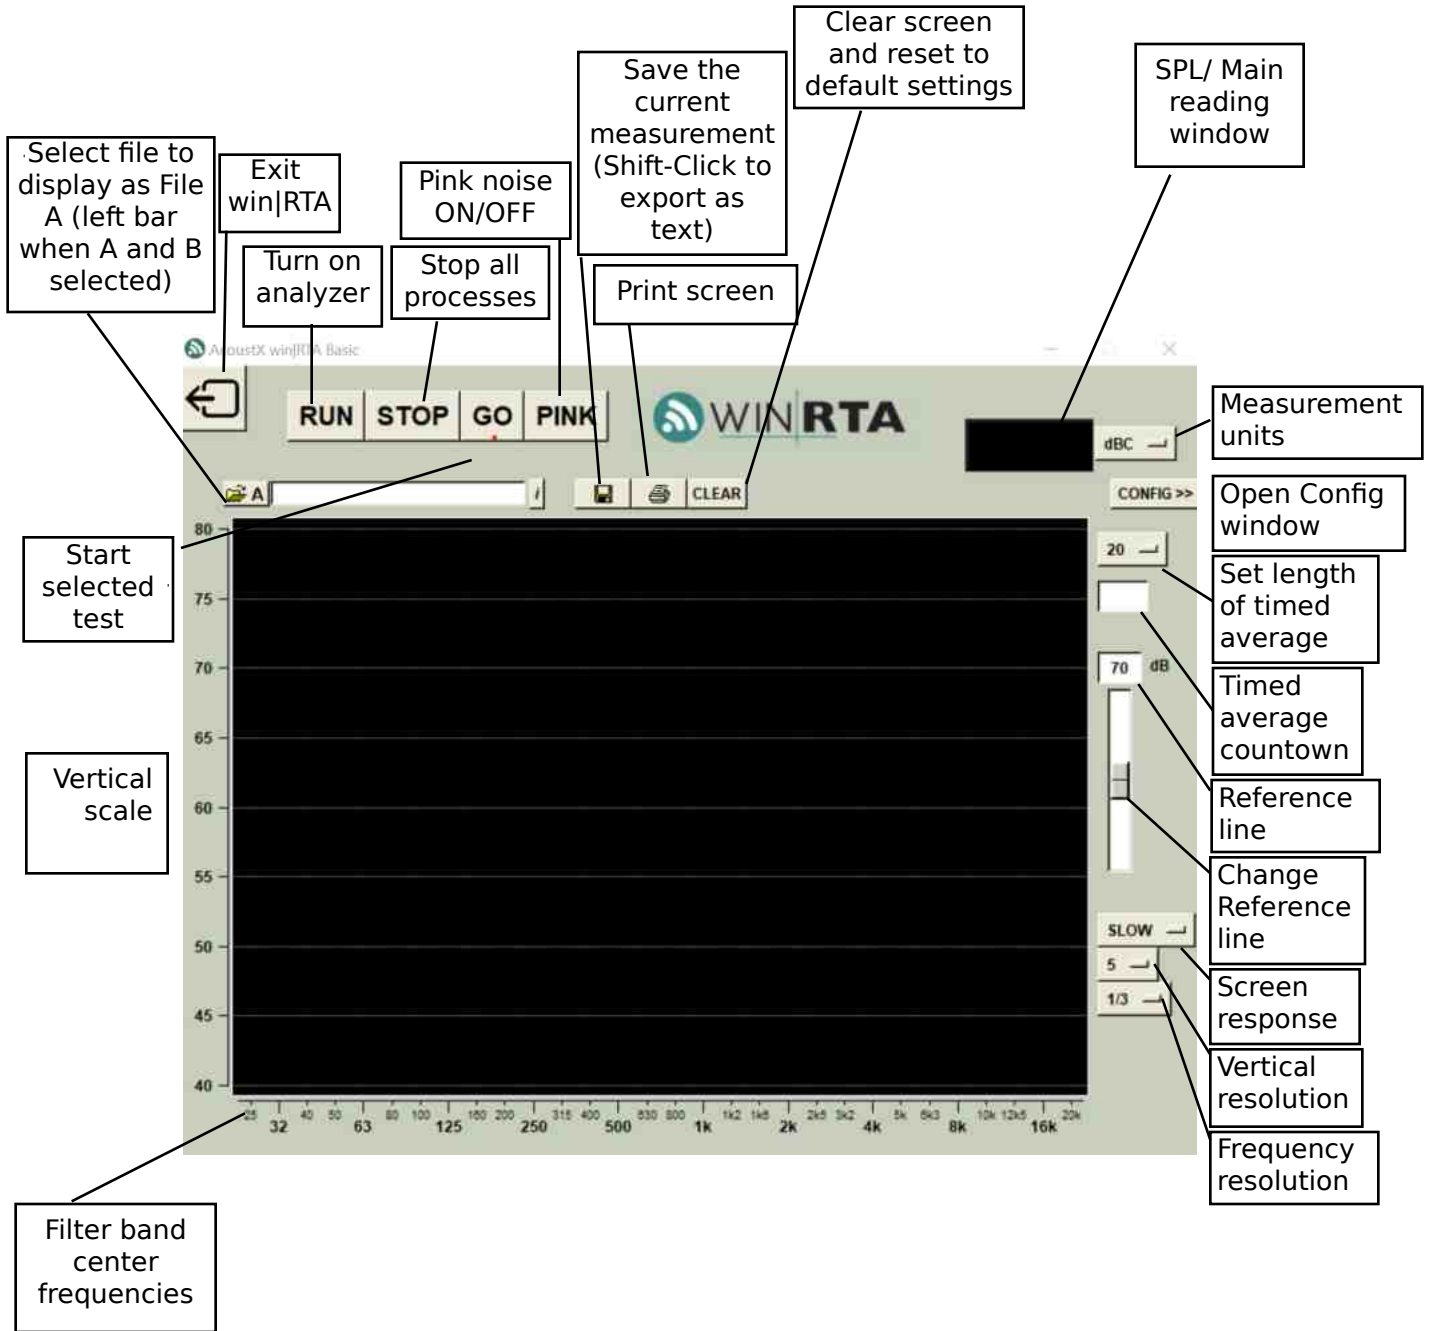


## SPECIAL KEYS AND FUNCTIONS

- ESC key kills all processes
- PgUp/PgDn or mouse wheel moves reference line
- Shift-click on Save button to export as text (.TXT)
- Hold cursor over filename field to see full pathname

## Note on the software:

When you see a button with a bar on the right side, this indicates that when you click on it, a drop-down menu will appear.

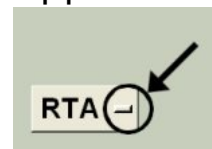

# Configuration: Profile, Display, Interfaces, Mic

**Configuration Options**

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Operator \_\_\_\_\_

Company \_\_\_\_\_

Room ID \_\_\_\_\_

Data Dir | C:/Users/holmes/Documen

Window Size

Normal  Compact

Write configuration data to disk

Select data directory

Technician name

Organization

Name of theatre or facility

Selected data directory Defaults to "My Documents"

Normal is for displays 1024x768 or larger. Compact is for smaller displays, 1024x600. Save Configuration and restart win|RTA to take effect.

**Configuration Options**

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Octave Grid

Balloon Help

Display octave markers

Enable balloon help

**Configuration Options**

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Audio Interface

Select | USBPre

Select audio interface

**Configuration Options**

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Apply Mic Calibration

Mic S/N | \_\_\_\_\_ | Clear

Bump


0.0

Press SHIFT to Import or Export


Enable and load microphone calibration file.

Adjust the microphone gain.

# Configuration: Input and Output

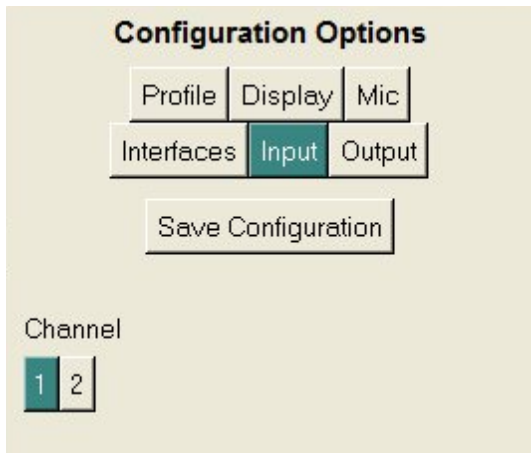

Select input channel

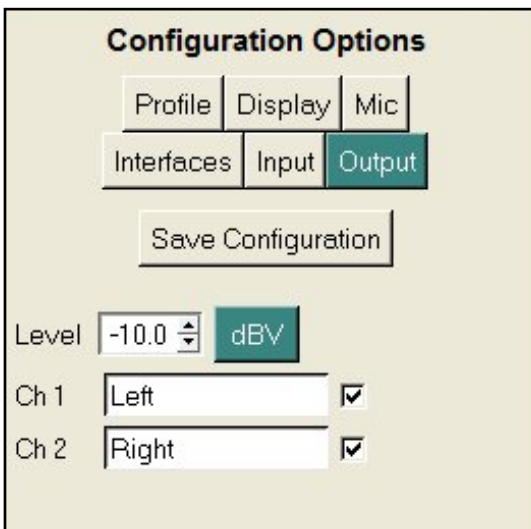

Set output level.

Enable outputs.

NOTE: The functionality shown on these screens will vary depending on the audio interface. Output voltage will only be correct with a tested interface.