



**win|RTA Basic
QuickStart Guide**

Version 1.8

AcoustX
122 Calistoga Road #318
Santa Rosa, CA 95409
Tel: 707-537-1310
Fax: 707-637-8654
www.acoustx.us

Installation

Unzip the distribution to a folder on your Desktop. Double-click on Setup and follow the directions. Start the program and open the Config menu.

Select Interfaces, then click on Select. After you have chosen the audio interface, and entered any other information you wish to save, click Save Configuration, and your settings will be saved for your next session.

NOTICE

© Copyright 2009 AcoustX. All rights reserved.


This manual contains confidential and proprietary information protected by copyright laws. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AcoustX. The information furnished herein is believed to be accurate and reliable. However, AcoustX assumes no responsibility for its use, or for any infringements of patents or other rights of third parties resulting from its use. AcoustX reserves the right to modify at any time the product functionality and features where appropriate, without notice.

Version 1.8

Limited Warranty

The win|RTA software is distributed on an "as is" basis, without warranty. AcoustX makes no representation or warranty, either expressed or implied, with respect to the software programs, their accuracy, quality, or fitness for a specific purpose. AcoustX shall have no liability to the purchaser, or to any other person or entity with respect to any liability, loss, or damage caused, or alleged to have been caused either directly or indirectly by the software contained on the distribution disk. This includes, but is not limited to, interruption of service, loss of data, time, or profits, or consequential damages resulting from the use of the software. If the distribution medium is defective, you may return it for a replacement within the warranty period.

Main Screen

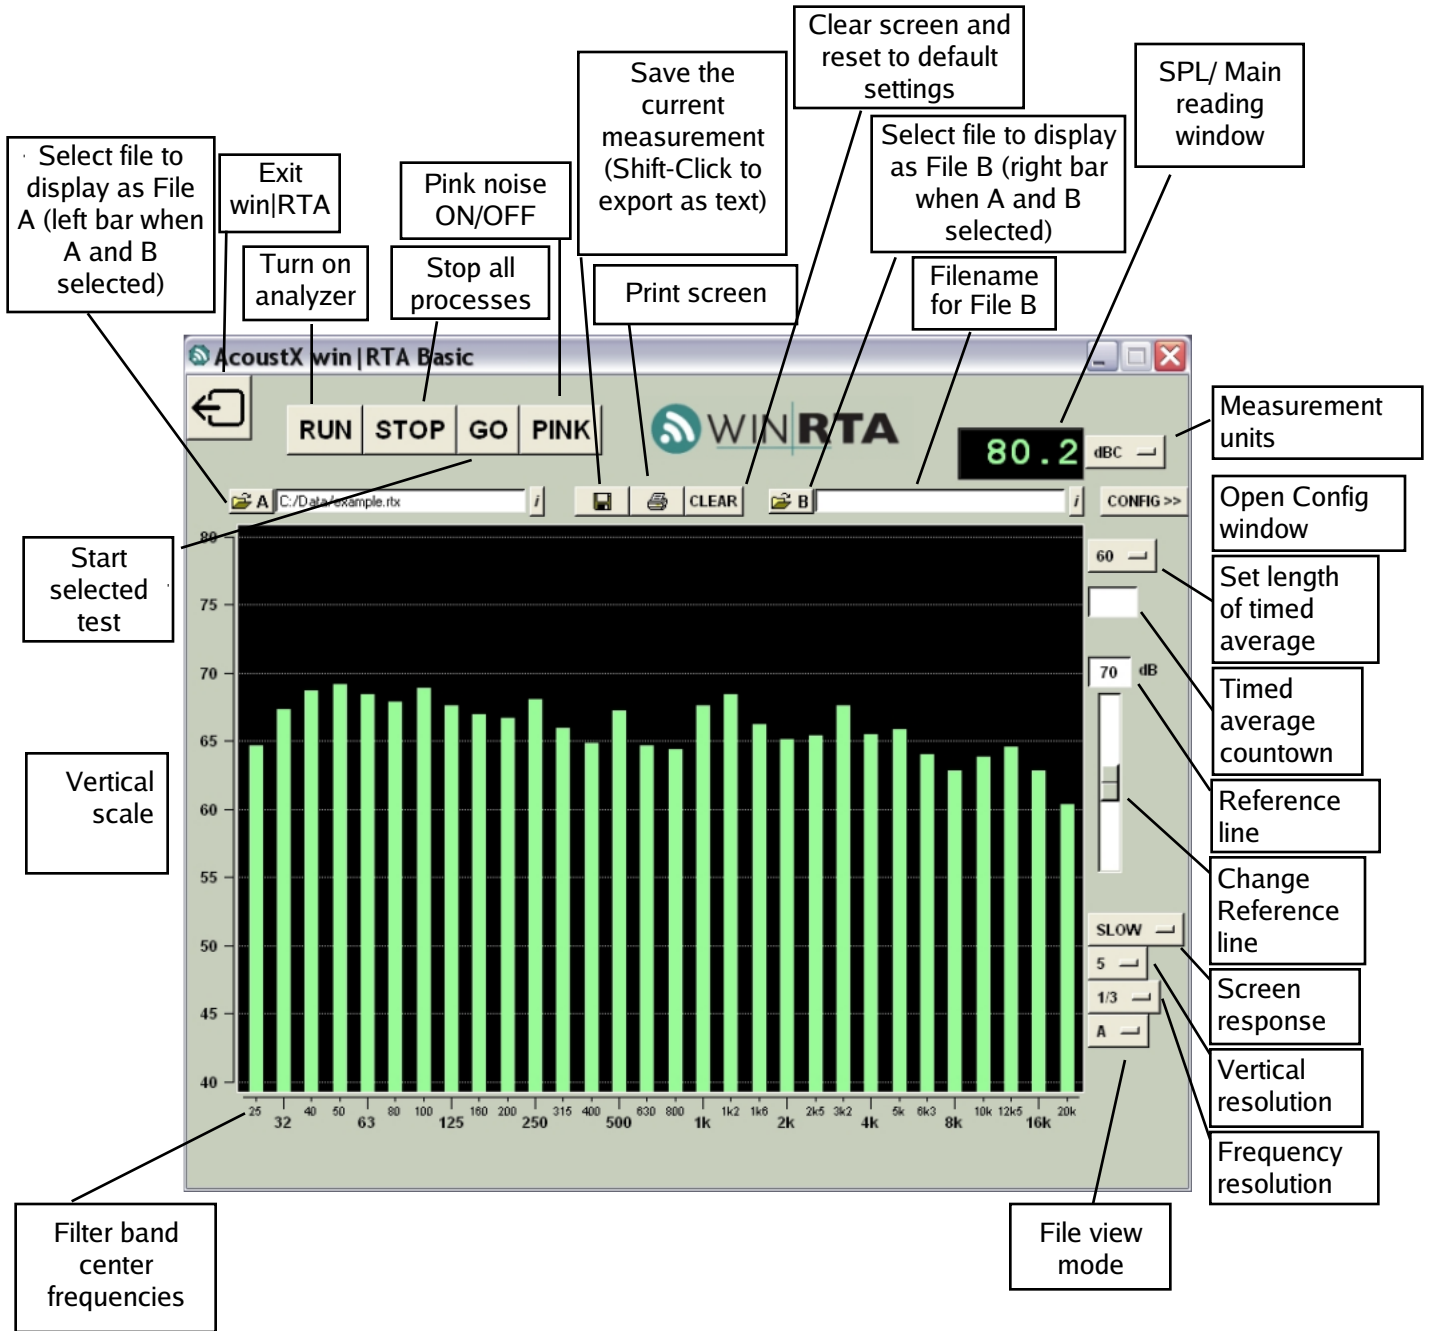


SPECIAL KEYS AND FUNCTIONS

- ESC key kills all processes
- PgUp/PgDn or mouse wheel moves reference line
- Shift-click on Save button to export as text (.TXT)
- Hold cursor over filename field to see full pathname
- Fkeys:
 - F6 RUN
 - F7 PINK
 - F8 GO
 - F9 Save

Note on the software:

When you see a button with a bar on the right side, this indicates that when you click on it, a drop-down menu will appear.

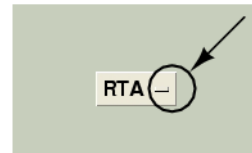

Configuration: Profile, Display, Interfaces, Microphone

Configuration Options

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Operator

Company

Room ID

Data Dir

Window Size

Normal Netbook

Write configuration data to disk

Select data directory

Technician name

Organization

Name of theatre or facility

Selected data directory
Defaults to "My Documents"

Normal is for displays 1024x768 or larger. Netbook is for the smaller netbook screens, typically 1024x600. Save Configuration and restart win|RTA to take effect.

Configuration Options

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Octave Grid

Balloon Help

Display octave markers

Enable balloon help

Configuration Options

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Audio Interface

Select

Select audio interface

Configuration Options

Profile | Display | Mic

Interfaces | Input | Output

Save Configuration

Apply Mic Calibration

Mic S/N Clear

Mic Bump Adjustment (dB)

Gain

Enable and load microphone calibration file.

Adjust the microphone gain.

Configuration: Input and Output

Configuration Options

Profile Display Mic

Interfaces **Input** Output

Save Configuration

Input

Line S/PDIF

Channel

1 2

Select Input

Select input channel

Configuration Options

Profile Display Mic

Interfaces Input **Output**

Save Configuration

Pink Noise Output

Analog S/PDIF AC3

Pink Noise Outputs

Level 300 **mV** dBV dBu

Ch 1 Left

Ch 2 Right

Select test signal output port
Note: Screen shows win|RTA with optional AC3 test signal encoder.

Set units of measure and level for outputs

Enable outputs. In Analog mode, the channels can be named.

NOTE: The functionality shown on these screens will vary depending on the audio interface. Output voltage will only be correct with an approved interface.